

100REI SYSTEM WIRING DIAGRAM

NOTE: A short-term discharge test may be conducted after the emergency inverter has been charged for 1 hour.

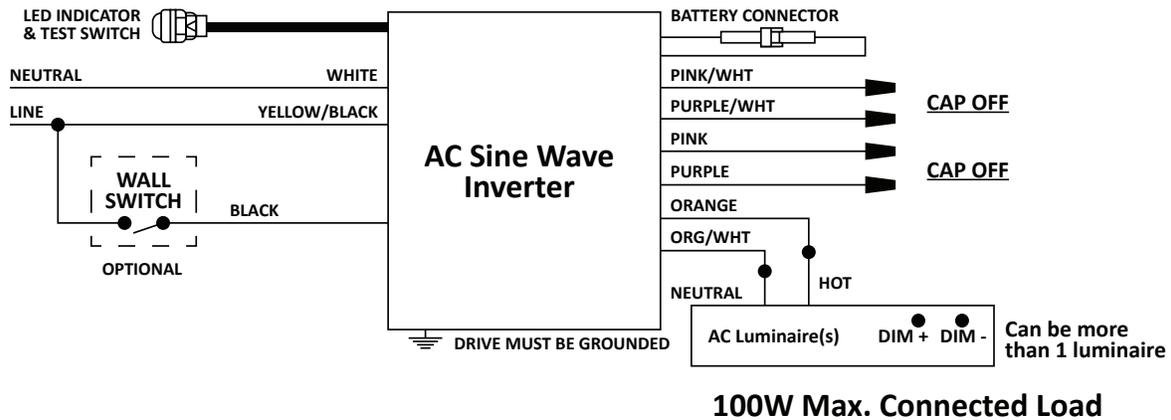
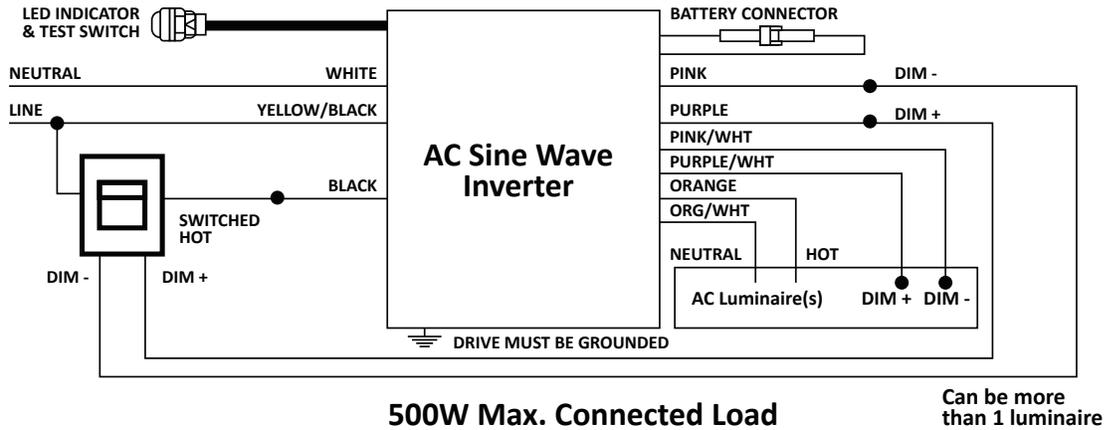


Figure B. Wiring Diagram without 0-10V Dimmer

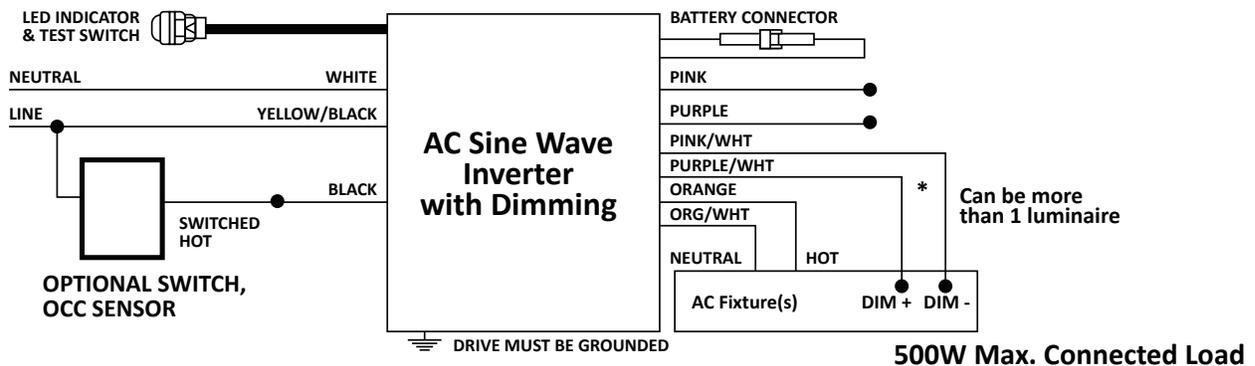


Figure C. Wiring Diagram for High Power loads greater than the inverter power but when no dimmer is used- such as a highbay. Purple /White(+) and Pink/White(-) MUST be connected from micro inverter to the AC driver dim leads with proper polarity. See Table 1 for maximum connected normal power load.